


South Bay Foundry

WWW.SOUTHBAYFOUNDRY.COM

PHONE: (619) 956-2780 FAX: (619) 956-2788

DTF36-1.5RDCIP

Ø36" TREE GRATE FRAME STYLE "CIP" FOR NEW SLAB AND PAVERS

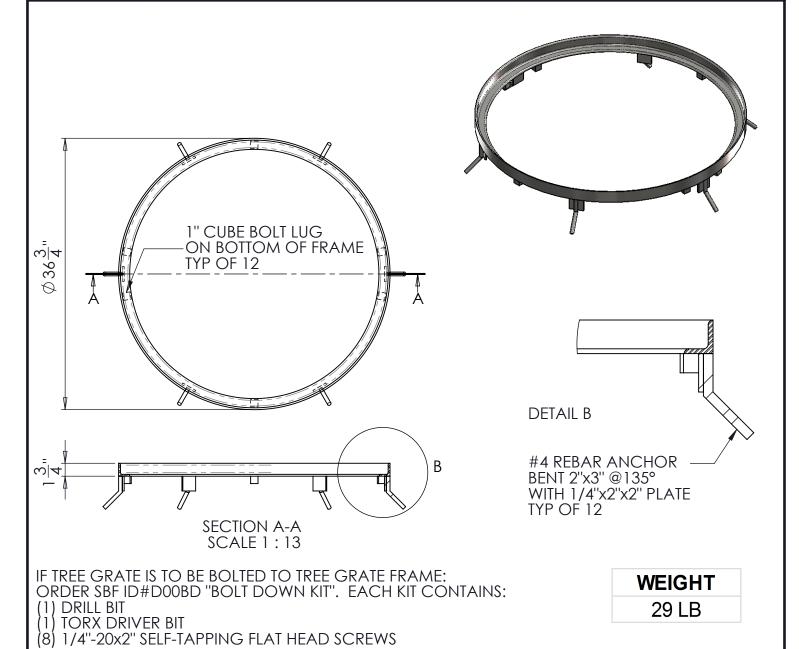

INSTALLATION SEQUENCE (BY OTHERS):

1) ENSURE FRAME IS STRAIGHT AND SQUARE

2) POUR CONCRETE AROUND FRAME AND ALLOW TO CURE

3) PLACE TREE GRATE INSIDE FRAME. HOLES WILL BE PRE-DRILLED IN TREE GRATE FOR SCREWS.

4) DRILL EACH BOLT LUG IN FRAME THROUGH THE GRATE HOLES AND DRIVE SCREWS INTO HOLES.

GENERAL INFORMATION	APPROVED
*MATERIAL: STEEL ASTM A36	BY:
*FINISHES AVAILABLE: BARE, PAINTED, POWDER COATED, OR GALVANIZED	TITLE:
	AGENCY:
	DATE: 8/21/2013