


South Bay Foundry

WWW.SOUTHBAYFOUNDRY.COM

PHONE: (619) 956-2780 FAX: (619) 956-2788

DTF4242-1.5CI

42"x42" TREE GRATE FRAME STYLE "CI" FOR NEW SLAB INSTALLATION

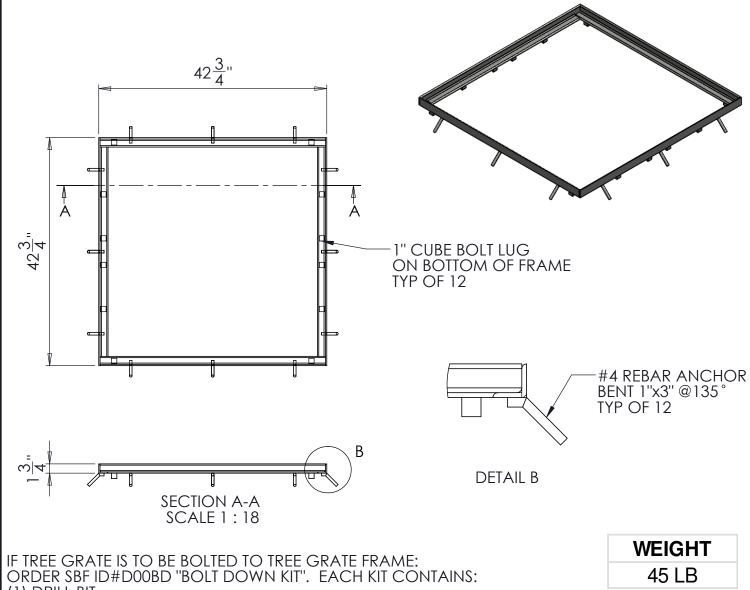

- DRILL BIT
- 1) TORX DRIVER BIT
- (8) 1/4"-20x2" SELF-TAPPING FLAT HEAD SCREWS

INSTALLATION SEQUENCE (BY OTHERS):

- 1) ENSURE FRAME IS STRAIGHT AND SQUARE
- 2) POUR CONCRETE AROUND FRAME AND ALLOW TO CURE
- 3) PLACE TREE GRATE INSIDE FRAME. HOLES WILL BE PRE-DRILLED IN TREE GRATE FOR SCREWS.
- 4) DRILL EACH BOLT LUG IN FRAME THROUGH THE GRATE HOLES AND DRIVE SCREWS INTO HOLES.

GENERAL INFORMATION *MATERIAL: STEEL ASTM A36 *FINISHES AVAILABLE: BARE, PAINTED, POWDER COATED, OR GALVANIZED	APPROVED	
	BY:	
	LVANIZED TITLE:	
	AGENCY:	
	DATE: 6/21/201	3